


we-inspire manuel d'impression

Introduction

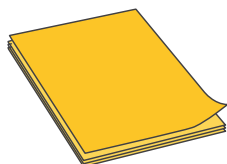


La technologie de collaboration we-inspire intègre parfaitement l'utilisation du papier traditionnel. En imprimant le motif unique Anoto sur une feuille de papier normale à l'aide de votre propre imprimante laser, vous pouvez numériser instantanément toutes les notes prises avec le stylet numérique Anoto. Les notes et les croquis seront numérisés en temps réel et en format vectoriel haute résolution pour sauvegarder ou modifier dans d'autres applications. L'intégration papier fonctionne également en mode hors connexion - parfait pour les réunions.

Imprimer du papier pour we-inspire fonctionne avec la plupart des imprimantes. C'est très simple si vous suivez les instructions. Selon votre imprimante et / ou votre pilote d'impression, certaines imprimantes pourraient ne pas produire de bons résultats. Par conséquent, il est fortement recommandé d'imprimer une seule page à des fins de test d'abord. Certains tests de dépannage font partie de ce manuel.

Spécifications

Imprimante

Il est possible d'utiliser la plupart des imprimantes pour imprimer du papier we-inspire

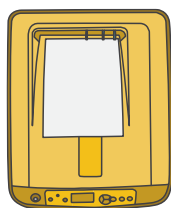

Type	Imprimante laser couleur
Résolution	min. 600dpi
Driver	Postscript (PS) drivers
Paramètres	Imprimez avec un paramètre de qualité/résolution sur haut. Imprimez en "taille réelle" (un recadrage peut s'effectuer, pas de mise à l'échelle !) Désactivez "optimisation d'image".

Lecteur PDF

Il est possible d'utiliser la plupart des lecteurs pdf pour imprimer des pages supplémentaires de we-inspire. Ce manuel est basé sur Adobe Reader.

Étapes

1. \ <path> h) 7 we-inspire.
2. \ <path> (Adobe Reader: 7 <icon>).
3. # <path>
4. (Adobe Reader: O <path> , <path> "@ <path> ").
5. Pour faire un test : choisissez d'imprimer uniquement la 1ère page (Adobe Reader : Pages à imprimer <icon> 1).
6. Disable all scaling or resizing options; also look into the printer's option page for such settings. It is essential that the PDF file is printed without any scale or resize of the page. Some cropping may occur, but will not influence the functionality of the digital paper. (Adobe Reader: Paper Size & Handling <icon> Size <icon> Select "Actual Size")
7. Open the printer's option page. (Adobe Reader: On the top next to "Printer:" P Button "Properties")
8. Set the printer to the highest resolution, if available (>600 DPI).
9. Disable all image and color optimization features, if available.
10. Print.

Testing

1. Open we-inspire write and make sure that we-inspire core is running.
2. Take an Anoto Digital Pen which is paired to your computer and turn it on.
3. Write something. You should see your page appear in the we-inspire write application.
4. Set the page visible (tap the pen on show/hide button in top-right paper corner) to see the quality of the writing recognition.

Troubleshooting

Problem 1: No page appears

- The pen is not paired: Check if the pen is connected and shows up in we-inspire core. If not, try to pair the pen using Windows Bluetooth settings (Control Panel ⇒ Add Device).
- The pen has no power: Check if the pen is turned on, the power LED turns to a steady green and the pen shows up in we-inspire core.
- The print has failed: Check if all settings are correct or choose a different printer model or driver if multiple are available.

Problem 2: A page appears but the content cannot be made visible, or the writing quality is very bad

- Too strong color-optimization by the printer-driver: Try to use another quality setting/color-optimization in the printer's properties.